

PiBox - Bug #166

sshd doesn't run due to missing directory

17 Feb 2013 16:00 - Hammel

Status:	Closed	Start date:	17 Feb 2013
Priority:	Urgent	Due date:	
Assignee:	Hammel	% Done:	100%
Category:	04 - Root File System	Estimated time:	0.00 hour
Target version:	0.5.0 - Beta 1		
Severity:	02 - High		

Description

Even if you add that directory it doesn't allow a login.

It would be easier to add dropbear back in and have a post build script in Buildroot remove the S50sshd init script so there is only one sshd that will ever get started at boot time.

History

#1 - 18 Feb 2013 12:06 - Hammel

- Severity changed from 03 - Medium to 02 - High

#2 - 19 Feb 2013 21:05 - Hammel

- Status changed from New to In Progress

- % Done changed from 0 to 50

Added dropbear back into rootfs build.

Post-build script has not yet been added to Buildroot.

#3 - 20 Feb 2013 17:38 - Hammel

- Status changed from In Progress to Closed

- % Done changed from 50 to 100

Add postbuild script. Initially just makes sure S50sshd is removed (in favor of dropbear) but later will support Buildroot that drops support for Customize option.